


SB RESCUE SLING

MAN OVERBOARD RECOVERY SYSTEM

INSTRUCTIONS - MOB Recovery Assembly

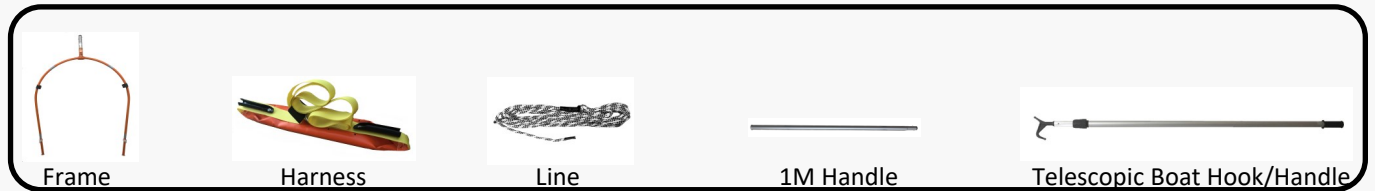

MOB Recovery - Assembly


1. Place the end of the strop over the stud situated on the closed end of the frame, locate the slider on the harness so that it covers the metal vane underneath the stud



2. Slide the 2 black plastic clips fitted on the harness to the end of each side of the frame (below the white collars)



3. Make sure the webbing of the harness is not twisted and feed it into the black plastic rings found on each side of the frame just below the shoulder

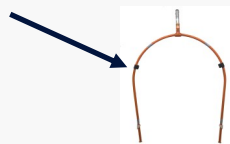

4. Slide the black harness clips forward until they are touching the white PVC discs fitted to the ends of the frame

5. Attach the line to the harness using the carabiner provided



6. Fit the handle and telescopic extension, ensuring that all locating lugs are fully engaged. To adjust the telescopic extension unscrew the black plastic collar, slide the inner pole to the required position and then re-tighten the collar

